


Please read instructions



Transport

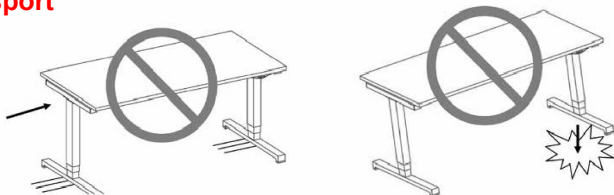

Before installation, deinstallation or troubleshooting



Stop the sit/stand desk.

Note: Switch off the power supply and pull out the power cable!

Remove all weights from the sit/stand desk.

Only trained electricians are permitted to open or replace electrical equipment.

Do **not** operate the desk in moist rooms such as bathrooms.

Never use the desk in explosive environments.

Before initial operation

Make sure the desk is assembled.

Check to see if the operating voltage of the desk matches the local power supply.

(See rating plate on the controller, standard = 230V)

Connect the plug connectors from the actuator and the side panels to the controller.

Connect the mains cable to the controller.



Attention: Fasten all cables to the desk base or the desktop so they cannot get damaged during operation.

Before first use

In case of power outage or any interruption of power, before use of the desk, next restart must be done:

push



button to move the desk down in the lowest position.

After that, push the button down once more and hold it 10 sec. until desk moves slightly down and back up. You will hear double click.

Everyday use

push



button to
move the
desk up

push



button to
move the
desk down

Keep the button pressed until desired position has been reached.

During operation

If the drives or the controller make any unusual noises or cause any unusual odours during operation, interrupt the power supply.

Make sure that the cables are not damaged.

When operating the sit/stand desk, make sure that no objects or body parts can get trapped.

All moving parts of the desk base must have at least 25 mm clearance to the adjoining components.

How to use a sit/stand desk



Attention: To avoid injuries or damaging of the desk, before any use, first make sure that there aren't any objects under or above the desk.

Any desk movement up or down should be done in standing position.

If the table have a collision sensor - please note that the sensor system is only a system protection and not a human protection.

How to program new lowest position

In case you want to change lowest possible position of the table, put table in desired height and then:

push button up and down at the same time and hold it until you hear double click.

push ▼ +

▲ When you want to undo new lowest position, put the table in new lowest position and push button up and down at the same time and hold it until you hear double click.

Initialisation / Reset

After assembling – or if the desk has been disconnected from the power supply for a long time – malfunctions on the desk are possible. The same applies if the connection between the drives and the controller was separated. In these cases, the desk controller has to be initialised.

If the controller expects a reinitialisation, the downward movement of the desk is only possible at reduced speed.

To initialise, move the desk to the bottom position; to do that, press the down key on the hand-switch until all drives have reached the lowest position. Press the down key once again and keep it pressed (approx. 10 seconds) until the desk moves slightly down and

then back up. Let go of the button only after the desk stops moving. If you let go of the button too soon, that causes a malfunction on the desk.

If this happens by mistake, you have to repeat the process.



Attention: The top limit stop of the controller is preset. For this reason, use only controllers that were supplied as suitable for the respective desk base.



Danger: The optionally available corrosion protection is **not activated** during any reset process. During this process, always watch out for the possible danger of being crushed.

Indication service note



Danger: Use solely genuine original accessories! Only skilled personnel are permitted to perform assembly work! Otherwise you will forfeit all claims for warranty or guarantee.



Danger: In case of a fault, please promptly contact your customer service representative! Only original FreeStand sit/stand desk spare parts are approved for repairs. Only skilled/authorized personnel are permitted to replace them! Otherwise you will forfeit all claims for warranty or guarantee.

Repairs

In case of a technical defect on this device, please contact an authorised customer service representative.



Attention: In the interest of preventing malfunctions, only authorised service personnel are permitted to make any repairs.



Attention: Opening any components of this desk base produces risks for the following malfunctions.

Warranty

We provide a 24-month warranty on this desk base. The warranty covers all material and production errors and applies from the date of production (see rating plate). The warranty is only valid under the condition that the desk has been used within the scope of the described parameters; that maintenance has been performed correctly and that repairs have been performed solely by authorised service staff. The sit/stand desk must not be improperly handled or used and no changes are permitted to be made on the desk; otherwise the warranty expires.

Maintenance / Cleaning

Regularly remove dust and dirt from the desk base, in particular from the guide tubes, and make sure that there are no damages and cracks. Check all fastening screws to make sure they are securely fastened and check all plug connectors, cables and plugs including proper functioning.



Danger: Clean the controller, actuator and the desk base only with a dry or slightly moist cloth. **Danger to life!**

Danger: Never let any fluids get into the system (controller, actuator, cable and base). **Danger to life!**

Attention: Aggressive cleaning agents can cause damage or discolourations on the product. Use only agents with pH-values of 6-8.